

### STANDARD SHOWER/ TUB-SHOWER


To install your EverFab shower or tub-shower, please follow the instructions below:

1. Ensure that the floor where the fixture will rest is level; if the floor is not level, a thin set mortar must be used to level the surface.
2. Once the floor is level, place the fixture in the alcove.

3. **IMPORTANT:** With the fixture in the framed alcove, tilt the fixture forward and **APPLY CONSTRUCTION ADHESIVE along each rung of the support plate and along the front threshold to secure the fixture to the floor.** The adhesive prevents noise that may result from the subfloor. Return the fixture to the upright position. Place weights on the fixture floor in the corners, near the drain, and along the front threshold to guarantee proper adhesion.



4. Nail or screw the fixture to the stud wall using one anchor per stud or one anchor every 16" along the horizontal flanges.
5. Secure the vertical flanges by inserting anchors at each end of the flange. Insert subsequent anchors every 12 to 18" along the length of the vertical flange. Drill pilot holes to facilitate anchoring.
6. As directed by local codes and standards, measure, locate, and drill holes for the placement of the shower valve and shower arm.

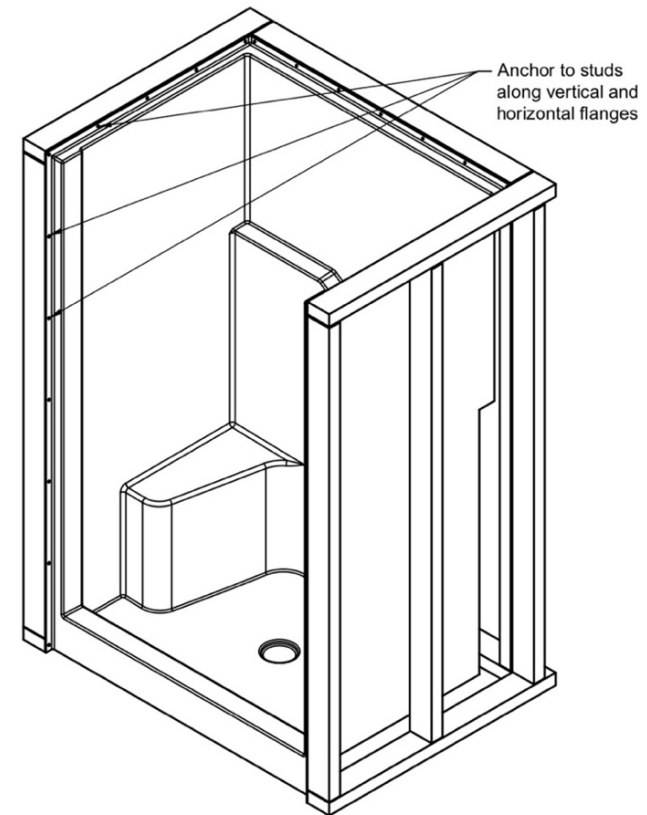

#### **CLEANING:**

It is recommended that general cleaning be performed using EverFab BathBrite cleaning solution. Avoid abrasive cleaning products as they may remove the glossy finish and make subsequent cleaning difficult.